

MANUFACTURER'S INDEX

ADMIRAL	Set Up
CHASSIS	
24 Series	1E
25 Series	1C
930 Series	3A
D11	1E
G10	19B
G11	1D
G12	2E
G13 (Except 12G1363)	2D
12G1363	19A
H10 (Except 3H10 and 4H10)	19B
3H10 and 4H10	19E
H12 (Except H1273 and H1297)	2D
H1273 and H1297	19A
K10 (Except T46K10 and T47K10)	19C
T46K10 and T47K10	74A
K15	19A
K16 U.S.A.	17C
K16 Canadian (Except 2X, 4X, 5X, 6X, 7X, 8X)	17C
K16-2X, 4X, 5X, 6X, 7X, 8X	19A
K18 (Except K18-1A)	19A
K18-1A	17D
K19	63A

K20	19A
K25	2D
M10 (Inline)	88A
M20	63A
M24	72A
M25	80A
M30 (30kV) Preferred Setup	102A
M30 (30kV)	80A
M45, M46 (Inline)	106A
M50 (30kV)	96A
M55	105A
Y3	82C

AIRLINE (See WARDS AIRLINE)

AMBASSADOR

MODELS	
A190	4A
A915, 916, 917, 919, 921	1C
A1901, 1912	4A
A2302, 05, 06	4A
A2500, 02, 04, 05, 06, 22	4A
AM7000	20A
AM7118, 8118	20A
AM9119	62A
2907	33A
2920, 21, 22	2C

2950, 52, 55	4A
2960, 62, 63	4A
6613	1C

AMC

MODELS	
C402, 406, 408	2C
C411, 412, 416	2C
CC164	1C
CLR42, 52, 54	1C
CLR60, 62, 64, 65, 66, 68, 72	1C
CLR75, 76, 82	2C
CLR202, 206, 232, 236	2C
CLR382, 386	2C
CP192, 292	4A
3C410, 420, 422, 426, 428	2C
3C432, 436, 438	2C
5CP303	22C
5CP306	47A

ANDREA

CHASSIS	
VCU321	1C
VCV321	1C
VCV325	2C
VCX325	2F

ARISTOCRAT

MODEL	
AA519, 550, 551	4A

ARVIN

MODEL	
78K39	22B
CHASSIS	
1.22601	22A
1.38001, 38101	22A
1.46501	22A
1.48101	2C
1.48201	56A

AUTOMATIC

MODEL	
CTV6600	8B

BRADFORD	Set Up
MODELS	
BATV60509, 25, 33, 41, 58	24A
BWGE55731	14A
BWGE56499	14A
BWGE56507	14A
BWGE56648	14A
BWGE56812	1C
BWGE60459	14A
BWGE91660	14A
CATV55335	24A
CMAT55426, 34	22A
CMAT89243	22D
CWGE55301, 84	14A
CWGE59576	14A
DMAT89391	22D
DWGE55210	14A
DWGE57042, 059	14F
DWGE57158	14F
DWGE89466	14A
DWGE89557	14A
DWGE89706, 714	14F
WGEC89813, 821	1C
WGEC89912, 920, 938, 946	1C
WGEC91504, 512, 520, 538	1C
WGEC91660	14A
WGEC91728, 751	1C
WGEC95349	1C
WGEC96586, 594	1C

WTG51656, 664, 672	63A
WTG51763	55A
WTG51771	22D
WTG51789	22A
WTG51805, 813	38A
WTG51938, 946, 953, 961	38A
WTG53132	38A
WTG53421	20A
WTG53579	14A
WTG54312	14A
WTG54321	20A
WTG54346, 353	22D
WTG54395, 403, 411	17C
WTG54429, 437, 445, 452	38A
WTG54478, 486, 494	38A
WTG56325	14A
WTG57901	14F
WTG59188	22A
WTG59196, 204, 212, 253	38A
WTG59261, 279, 287, 295	38A
WTG60053, 061	14A
WTG61002, 61501	47A
WTG79301	60A
WTG79319 Inline (CRT controls will not be in order)	90A
WTG79335	62A
WTG79335Q	62B
WTG79343, 350	60B
WTG79392	71A
WTG79722, 772	20A

WTG79814 Inline (Red and Blue Guns Interchanged)	90A
--	-----

WTG80168, 176	20A
WTG80192, 80200	71A
WTG80309, 317, 325	38A
WTG80333, 341, 358, 366, 374	70A
WTG80457	62B
WTG80655	62B
WTG80663	20B
WTG80671, 689, 697	70A

BOHSEI

MODEL	
TC700	92E

BROADMOOR

MODEL	
6911C, CA	16E

CARDINAL

CHASSIS	
18B01	14A

CATALINA

MODELS	
122-240, 244, 248, 279	14A
122-570	1C
122-572, 574, 576, 578	1C
122-660, 662	1C
122-664, 666	1C
122-667, 668, 670	14A
122-674	1C
122-676	1C
122-738, 740, 741, 742, 743, 749	14A
122-750, 755, 757, 758, 759	14A
122-760	14A
122-765	4A
122-766, 767	14A
122-768	14A
122-771, 773, 774, 775, 776	14A
122-780, 782	4A
122-840, 842, 844, 846	4A
122-1160, 1165, 1170, 1175	1C
122-1810, 20, 40, 45, 50, 70, 80	38A
122-2113	65A
122-2117, 19	33A
122-2121	56A

CATALINA (Cont.)	Set Up
MODELS	
122-2810, 15, 20, 45, 50, 55	38A
122-2860, 65, 80, 85, 90	38A
122-3120, 22	56A
122-3128, 30, 32, 35, 42, 50	38A
122-4183, 86, 89	75A
122-4187	75A
122-4346, 49, 56, 59	38A
122-4386, 89	70A
122-4886, 89	70A
122-5183, 86, 89	75A
122-5196, 99	75A
122-5316, 19	71A
122-5336	70A
122-5349, 86	70A
122-5359	70A
122-7323, 56, 59, 86	70A
122-7323B, 56B	104A

CHANNEL MASTER

CHASSIS	
918 (Models 6100, 6104)	3A
MODELS	
6100, 6101, 02, 03, 04	3A
6105	14A

6106, 07	38A
6108, 09, 10	14A
6111	38A
6112, 13, 14, 15, 16, 17, 18	14A
6119	38A
6120	3A
6121, 22, 23, 24	38A
6126, 27	82B
6128, 29	75A
6130	16B
6131	16D
6134, 35	16B
6138	16D
6143	56A
6150, 51, 52, 53, 54, 55, 56	38A
6157, 58, 59, 60	70A
6575	8B

CLAIRTONE

CHASSIS	
C11, C15	2F

CLOVIS

MODELS	
122-1018	33A
122-1024	33A

CORONADO

MODELS	
TV2-1604, 40, 44	75A
TV2-1622	43A
TV2-1642	56A
TV2-2011, 12, 21, 22, 31, 32, 34	38A
TV2-2035	70A
TV2-2036	70A
TV2-2041, 42	38A
TV2-2044	70A
TV2-2051	38A
TV2-2054, 55	70A
TV2-2057A	104A
TV2-2061, 62	38A
TV2-2064	70A
TV2-2071, 74, 75	38A
TV2-2076	70A
TV2-2081	38A
TV2-2084, 85	70A
TV2-6610, 11, 12, 13, 15, 16, 17, 18	14A
TV2-6622, 23, 24, 25, 26, 27, 28, 29	14A
TV2-6630, 31, 32, 33	14A
TV2-6634, 35, 36, 37, 38, 39	38A
TV2-6810, 11, 14	14A
TV2-6815	38A
TV2-9658	14C
TV2-9681, 82, 83, 84	1C
TV2-9685	14A

TV2-9687, 88, 89	1C
TV2-9690, 91, 92, 93, 94, 95, 96, 97, 98, 99	1C
TV2-9700, 01, 03, 04, 05, 06, 07	14A
TV2-9710	14A
TV2-9730	1C
TV2-9731	14A
TV6-1614, 24	88A
TV6-1645, 46	64A
TV6-1741, 54	14A
TV6-2045	64A
TV6-2048, 49, 50	64A
TV6-16385, 93	85A
TV6-16518	85A
TV6-20486, 494, 502	64A
TV15-9702	14A
TV15-9720	14A
TV22-1611	16E
TV22-1621	56A
TV22-1622	54A
TV22-1631	16E
TV22-1641, 42	56A
TV22-6404	54B
TV22-6407	16E
TV24-1035	54B
TV25-1632, 33	19A
TV25-1643	19A

CORVETTE

MODEL	
1872	68A

CRAIG	Set Up
MODELS	
6303, 04	16B

CURTIS MATHES

MODELS	
52M594	65B
CHASSIS	
CMC-12, 15, 20, 21	30A
CMC-22, 24, 26, 27, 28, 29, 33	14A
CMC-34, 35	16B
CMC-37	53A
CMC-38	14A
CMC-40	53A
CMC-44	14A
CMC-51, 52	65A
CMC-53 (30kV)	65A
CMC-57, 58, 59	65A

DELMONICO

CHASSIS	
CC-210	1C
CCTV-21	1C
CT-195, 197, 199	2C
PCT-198	2C

DUMONT-EMERSON

MODELS	
16DP02	19C
29P04	15A
29P08	15A
29P10	16B
35P01, 02, 03, 04	16A
51K01, 02, 03, 04	1C
CHASSIS	
K10	19C
K16	17C
K17, K18	19A
K19	63A
K20	19A
K26	17C
M20	63A
920, 930	3A
120296	1A
120575	1A
120608, 09, 16, 42, 43, 99	1A
120722, 34, 35, 86	1A
120790	2C
120808	1C
120809	2C
120814, 22, 23, 35, 44, 58, 59, 68, 71	4A
120883, 84, 90	14A
120893, 94, 95	4A
120896	14A
120897, 98, 99	4A

120916, 18, 19, 20, 21, 23, 24, 26, 28	14A
120956, 57, 58, 72, 74, 76, 77, 80, 81, 82, 83, 84	14A

ELECTROHOME

CHASSIS	
CU, U, IU	1C
C3, 4, 5, 6, 7, 9, 10, 11	14A
C12, 14	66A
C15	14A
C16, 17	66A
C21, 22, 23	66A
C26	65A
C30, 31	66A
C36, 37	82C
C38	82A
27P125	14A

EMERSON (See DUMONT-EMERSON)

ETHAN ALLEN

MODELS	
50-1001-211	20A
50-1002-214	20A
50-1003-212	20A
50-1004-204	20A

50-1006-212	20A
50-1008-212	20A
50-1009-212	20B
50-1010-211-212	62A
50-1010A-211	62B
50-1011-212	62A
50-1011A-212	62B
50-1013-211	20B

GENERAL ELECTRIC

CHASSIS	
C1, C2 (18", 19", 20")	68A
C1, C2 (23")	20A
CA	1C
CB (21" Version)	1F
CB (23" and 25" Version)	5A
CD	68A
CW, CX, CY	1C
EB	20A
FY	1C
KC	5A
KD, KE, KE-11	20A
L1, L2 (18", 19", 20")	68A
L1, L2, LB (23")	20A
LT-2	20A
10JA	62A
10QA	62B
16JA	62A
17YA (Inline)	90A
19JA	62A

GENERAL ELECTRIC (cont.)	Set Up
CHASSIS	
19QA	62B
19QB (30kV)	62B
19YA, YC (Inline)	90A
25EB	20A
25MA, MB, MH	20B
25MC (30kV)	20B
25YM	101A

HEATHKIT

MODELS

GR25	14A
GR53	1C
GR270, 370, 371	41A
GR295, 581	14A
GR2000, 2001	44A

HITACHI

CHASSIS

CA-550	82A
CB-2165	RED & BLU
CE-700, 725	FOR HORIZ
CR-350	YEL & BLK
CT-900, 913	FOR VERT
CFA-550	15A
CNA-24T, 25T	15A

HOFFMAN

CHASSIS

913-000356, 366	2C
913-000386	2C
913-000617	2C
913-162215	2C
913-187486	2C
913-195547	2C
917-000026	2C

JC PENNEY

MODELS (685 and 855 prefixes omitted)

0055, 0063	87A
0071	44B
0097	87A
0105	90A
0154	92A
0212 (30kV Inline)	90A
0725	56A
1902	44B
1913 (Quintrex)	60B
1921	43A
1939 (30kV)	44A
1947	60A
1962	44B
1970 (30kV)	44A
1996 (Quintrex)	60B
2001	87A

2002	70A
2010	40A
2012 (Inline)	92E
2012 (Quintrex)	92A
2017, 2025	87A
2019, 2023, 2029, 2033	103A
2041, 2046A (30kV) (Inline)	92E
2044	70A
2069	60A
2093	70A
2109	82C or 109A
2112, 2118, 2119, 2121 (30kV) (Inline)	90A
2114, 2119, 2120, 2122 (Inline)	90A
2124 (30kV)	62A
2184	60B
2192	43A
2201, 2203	43A
2211, 2214	44B
2218 (28kV Quintrex)	92B
2259 2291	90A
2309	70A
2323	62A
2374	44A
2630	14A
2631	24A
2847 (28kV Quintrex)	92B
2849	40A
2851, 2852	22A
2853	40A
2855	22B

2856	40A
2857	22A
2858	40A
2861, 2862, 2863	22B
2868	60A
2870	56A
2871	22D
2872	55A
2874	60A
2875, 76, 77, 78 (Quintrex)	60B
2880	16E
2881	22D
2882	22A
2883	22D
2884	40A
2885	22D
2886	22A
2887	22D
2888	60A
2889, 2890	40A
2891, 2892	1C
2893, 94, 95, 96	22A
2895A-48, 2896A-48	2C
2897A, 2897-48, 2898-46	22B
2901	60A
2904 (Inline)	92E
2982	1C
4002, 4004, 4006	103A
4621, 22, 23, 31, 32	14A
4633, 34, 35	24A
4821	1C
4822	14A
4827, 28	24A

JC PENNEY (Cont.)	Set Up
MODELS	
4832, 33	14A
4834, 35	38A
4841, 42, 44, 45, 46, 47	1C
4848	38A
4849	71A
4851-48, 4852A-46, 4853-49	14A
4851B-48, 4852B-46, 4853B-49	38A
4854, 55, 56, 57	38A
4861, 62	1C
4863, 64	38A
4866, 67, 68	14A
4871, 72, 73, 74, 75, 76, 77, 78	2C
4881, 82, 83, 84, 85, 86, 87	2C
4888	24A
4889	14A
4891, 92	24A
4893, 94, 95	2C
4896, 97, 99	38A
4901, 02, 06	44A
4907, 11, 12	70A
4908, 4909	103A
4914, 15, 16	44A
4917, 18, 19	70A
4919B	104A
4921, 22, 23	38A
4924	70A

4937, 4944B, 4946	103A
4944AA	44D
5880	38A
6811, 12	70A
6881, 82, 83A	2C
6883B	38A
6885	2C
6891, 92, 93, 94, 96, 98	38A

CHASSIS

K2000 (Wells Gardner)	104A
-----------------------	------

JVC-NIVICO

MODELS

151	33A
7130 (Some Vert Fold)	76A
7208	33A
7310	33A
7320	33A
7408	33A
7438	33A
7500	33A
7510	33A
7520	33A
7800	33A
7830	76A

K MART

MODELS

SKC1300	106A
SKC1310	82C

SKC1700	104A
SKC1910	82C
SKC1951A (Inline)	88A
SKC1952A	106A
SKC1960	14D
SKC1980 (Inline)	85A
SKC2500, 2510	14D
SKC2520, 30, 40	64A
SKC2560	64A

MAGNAVOX

CHASSIS

U or V Series 37, 39, 41	1A
U or V Series 43, 45	1C
T or U 904	7A
T or U 911	6A
T or U 918	1G
T or U 919, 920	6A
T or U 922	16B
T or U 924	21A
T or U 931	6A
T or U 932	16B
T or U 933	6A
T or U 934	1G
T or U 936, 938	57B
T or U 939, 940	6B or 6C
T or U 947	65B
T or U 950, 951	6C
T or U 952	57A
T or U 956, 957	58A
T or U 958	6D

T or U 962	6C
T or U 971	57B
T or U 974	21B
T or U 976, 979	59A
T or U 989	77A
T or U 995	78A
T938	1G
T981, 982, 987 (Inline)	85A
T985, 986 (Inline)	86A
T991 (Inline)	91A

MGA

CHASSIS

3B81, 3D81 (Models CH120, 121, 140, 141, 160, 180, 181, 190, 191)	47A
T511, 512, 513, 514 (Models CM250, 251, 252, 253, 254, 255, 256)	38A

MODELS

CS1300	82C
CS1390 (Inline)	82C
CS1531, 1590 (Inline)	82C
CS1731, 1790, 1791 (Inline)	82C
CS1901, 1931, 1933, 1994 (Inline)	82C
CS2190, 2590	99A

MIDLAND	Set Up
MODELS	
15-212	16E
15-213	65A
15-214	46A
15-215	16B
15-218, 219	31A
15-225	56A
15-226, 227	54A
15-228	16E
15-229	56A
15-239, 249	16E
15-242, 244, 257	106A
15-269	

MILOVAC	
MODELS	
CT-180, 711	16B

MONTCLAIR	
MODELS	
CC-574, 575	14A
19C-564	4A
23C-572, 573	4A
85-580, 581	4A

MOTOROLA (See QUASAR)

MUNTZ	
CHASSIS	
AS9015	1H
AS9021	14A
Run C18A01	1H
Run C18B01	14A

NTC	
MODEL	
1300CL	92E

OLYMPIC	
MODELS	
CL-105	1C
CT513	65A
CT515, 518, 519	16B
CT909, 910	2C
CT-911	83A
KL-115	1C

CHASSIS	
CT-1940, 1990	83A
CTC-15, 16	1C
CTC-17, 18, 19, 20, 21	2C
CTC-30, 31	14A
CTC-120, 220	1C

PACKARD BELL (See TELEDYNE PACKARD BELL)

PANASONIC	
MODELS	
CT21, 23, 24, 25	22D
CT26, 27, 28	55B
CT61	22A
CT62, 63, 64, 65	22D
CT66	22A

CT91, 92, 93, 94, 95, 97, 98	22A
CT120	22A
CT210	22A
CT215	92A

CT250	22A
CT252, 253, 254, 256	60B
CT261	60B
CT314	92B
CT316	92E

CT324	92B
CT326	92E
CT391, 392, 394, 395, 396	22A
CT398	60A
CT398A	60B

CT517, 527	92E
CT601, 602, 603, 604, 606	22D
CT701 (30kV)	60A
CT701A (30kV)	60B
CT702 (30kV)	60A

CT704 (30kV)	60B
CT714 (30kV)	92B
CT716	92E
CT905, 906 (30kV)	92E
CT910, 911 (30kV)	60B
CT914 (30kV)	92B
CT915, 916 (30kV)	92E
CT917, 937, 947, 957	92G
CT924, 934, 944 (30kV)	60B
CT926, 936, 946, 976	92E
CT974 (30kV)	92B
CT991	22E
CT2507, 16, 26, 36, 46	92C
CT2514, 2524, 2534 (30kV)	60A
CT2517, 27, 37, 47, 57	92E

PENNCREST- See JC PENNEY

PHILCO	
CHASSIS	
A100, 101	17B
A200, 201	17B
A301	17B
E20, 21 (Inline)	89A
E22	93A
E24	89A
E25	93A
E40, 41, 42, 44	67A
2CN20	35B
2CP30, 31	35B

PHILCO (Cont.)	Set Up
CHASSIS	
2CY80	17B
3CN20	35B
3CP30, 31	35B
3CR40, 41	35B
3CS40, 45	35B
3CS90, 91	61B
3CY80	17B
3CY90, 91	61B
4CS71, 72, 73, 74	61C
4CY80	17B
4CY87, 90, 91	61C
5CM31	89A
5CR41	35B
5CS45	35B
5CS51, 52	81A
5CS61, 62, 63 (30kV)	81A
5CY81, 82	81A
5CY93 (30kV)	81A
12L80, 13L80	1C
14M91	1C
15M90, 91	1C
16M91	1C
16NT82	9A
16QT85	9A
17KT50	9A
17MT70	17B
17MT80	1C
17NT82	9A

17QT85	9A
18KT50	9A
18MT70	17B
18QT85	17B
19FT20	32A
19FT60	35A
19KT40	35A
19KT50, 51	9A
19M91	1C
19MT70	17B
19MT79, 80	1C
19QT85, 87	17B
20HT70, 71	35A
20KT40, 41	35A
20QT74, 75, 76, 87, 88, 90	17B
21KT40, 41	35B
21ST90, 91	14A
22LT45	35B
22QT79, 80	17B
22ST80, 81	14A

PILOT	
MODELS	
C305	4A
C315, 25, 35, 45, 85	4A
25T25, 35, 45, 75	4A

QUASAR	
CHASSIS	
TS-907	1H
TS-908 (Except AETS, ETS)	8A
AETS and ETS-908	18A
TS-912	1L
TS-914 (Except 914Y and YB)	26A
TS-914Y and YB	28A
TS-915	34A
TS-917 (Early)	18A
TS-918	26A
TS-919	34A
TS-921	26A
TS-924	46A
TS-929 (as follows)	
C18TS, D18TS, E16TS,	51A
F18TS, G18TS, H18TS,	
FA18TS, FB18TS,	
GA18TS,	
YFA16TS, YFB18TS	50A
16TS, 18TS	51A
TS-930	19C
TS-931	34A
TS-934	50A
TS-938 (30kV)	34A
TS941, 942	97A
(Setup 34A, anode over 30kV)	
TS945, 949	98A
TS951	108A

TS953	92D
TS958	92C
TS959	92D
TS961, 962	92F
TS963	108A

RCA	
CHASSIS	
CTC7, 9, 10, 11, 12, 15, 16	1C
CTC17, 19	14A
CTC20	1C
CTC21	14A
CTC22	45A
CTC24, 25, 27, 28	14A
CTC30, 31, 35, 36, 38, 39	14A
CTC40	41A
CTC41, 42, 43	43A
CTC44	41A
CTC46	44A
CTC47	41A
CTC48 - CK1500X	44C or 44A
- CK3000	44A
CTC49, 59 (110 Degree)	100A
CTC50, 51, 52, 53	43A
CTC54	44A
CTC55	43A
CTC58 - CK1500X	44C or 44A
(30kV) - CK3000	44A
CTC60	44B
CTC62 (Inline)	87A

RCA (cont.)	Set Up
CHASSIS	
CTC63	43A
CTC64	44A
CTC66	43A
CTC68 - CK1500X 44C or 44A (30kV) - CK3000	44A
CTC70,71 (30kV)	44B
CTC72,74 (30kV, Inline)	87A
CTC76 (30kV)	44B
CTC78 (28kV) CK3000	44A
	CK1500
	or 44C
CTC81 (30kV)	44D
CTC85,86	103A
CTC87,88	107A
CTC89,90,91,92	103A

RCA CANADIAN

CHASSIS	
H20,H25	43A
S20,S25-CK1500X 44A or 44C -CK3000	44A

RUTHERFORD

CHASSIS	
CMC24,33	14A

SANYO

MODELS

21C10	16D
31C36,C38	99A
31C39,44	99A
51C11,C31,C41	16B
51C52 (Picture horizon-tally reversed)	99A
81C13,C14	16A
91C12	16A
91C16,C17,C18,C57	16B
91C30,C53,C54	95A
91C50,C60,C61,C70	99A
91C63,C75	95A
91C74,76	99A
6502,6503	16A

SEARS

CHASSIS

456-	
72041 thru 089	2C
72150 thru 183	2C
72283	23A
72370 thru 380	2C
72440 thru 455	14A
72560 thru 575	14A
528 or 529-	
52508 thru 509	1A
61110 thru 149	1A
61280	1A
62000 thru 037	1A

62060 thru 081	1C
62090	1A
62120 thru 141	1C
62180 thru 199	1C
62200 thru 226	1C
62240 thru 270	2C
62300 thru 301	40A
62330 thru 336	2C
62390 thru 394	1C
62450 thru 493	1C
62510 thru 511	40A
62540 thru 563	1C
62600 thru 610	2C
62630 thru 653	1C
62830 thru 852	2C
62910 thru 926	2C
72030 thru 089	2C
72100 thru 183	2C
72280 thru 286	23A
72370 thru 399	2C
72400 thru 406	2C
72430	23A
72440 thru 475	14A
72500 thru 531	23A
72560 thru 594	14A
72600 thru 688	14A
72720	36A
72730 thru 735	14A
72840 thru 868	23A
72900 thru 948	23A
81000 thru 046	23A
81100 thru 116	23B
81200 thru 209	23B
81300 thru 365	23B

82000 thru 004	14A
82100 thru 103	14A
82200 thru 224	14A

MODELS

528 or 529-	
40590300 thru 0310 (Inline)	85A
40591400 thru 1419 (Inline)	85A
40640300 thru 0311 (Inline)	85A
40720300 thru 0347 (Inline)	85A
40721400 thru 1405 (Inline)	85A
40910200 thru 0205	14D
40950000 thru 0021	23B
41103300 thru 3302	14D
41104400	14D
41105400	14D
41106500 thru 6501	14D
41110200 thru 0202	14D
41240200 thru 0202	14D
41250200 thru 0210	14D
41670300 thru 0314	14D
41671400	14D
41681016	23B
41681125	23B
41681900 thru 1943	23B
41682200 thru 2230	14D
41710500 (Inline)	85A

Sears (Cont.)	Set Up
MODELS	
41740400 thru 0405	64A
41741400 thru 1405	64A
41880000 thru 0014	14D
41880100 thru 0109	14D
41881200 thru 1218	14F
41940500 (Inline)	85A
41950300 thru 0328	64A
41951400 thru 1404	64A
41960300 thru 0360	64A
41970300 thru 0305	64A
41980300	14F
42000400 (Inline)	85A
42001400 thru 1410 (Inline)	85A
42002500 thru 2505 (Inline)	85A
42050500 thru 0505 (Inline)	85A
42711000 thru 1024	23B
42790000	2C
43000000 thru 0022	23B
43040000 thru 0021	23B
43050000 thru 0021	23B
43060000 thru 0013	23B
43070000 thru 0013	23B
43080000 thru 0013	23B
43100000 thru 0013	23B
43101000 thru 1039	14D
43110000 thru 0013	23B

43111000 thru 1039	14D
43120000 thru 0013	23B
43121000 thru 1039	14D
43140000 thru 0049	14D
43141200 thru 1208	14D
43146000 thru 6044	14D
43150000 thru 0049	14D
43156000 thru 6049	14D
43160000 thru 0049	14D
43166000 thru 6044	14D
43170000 thru 0049	14D
43176000 thru 6044	14D
43220000 thru 0035	14D
43260000 thru 0023	14D
43266000 thru 6022	14D
43270200 thru 0215	14F
43280200 thru 0215	14F
43290100 thru 0110	14D
43300100 thru 0117	14D
43310100 thru 0107	14D
43320100 thru 0115	14D
43321200 thru 1204	14D
43330100 thru 0107	14D
43340000 thru 0015	14D
43341100 thru 1128	14D
43350000 thru 0015	14D
43351100 thru 1128	14D
43361100 thru 1126	14D
43500200 thru 0207	14F
43503300	64A
43511200 thru 1205	14F
43513300	64A

43520200 thru 0216	14D
43521200 thru 1210	14D
43530200 thru 0216	14D
43531200 thru 1210	14F
43540200 thru 0210	14F
43541200 thru 1211	14F
43550200 thru 0210	14F
43551200 thru 1211	14F
43560200 thru 0210	14F
43561200 thru 1211	14F
43570200 thru 0207	14F
43580200 thru 0207	14F
43590200 thru 0207	14F
43600200 thru 0252	14E
43606200 thru 6201	14E
43610200 thru 0252	14E
43616200 thru 6201	14E
43620200 thru 0252	14E
43626200 thru 6201	14E
43677300	14E
43690300 thru 0306	64A
43740300 thru 0320	64A
43741300 thru 1314	64A
43750300 thru 0320	64A
43751300 thru 1314	64A
43770300 thru 0336	64A
43780300 thru 0336	64A
43790300 thru 0336	64A
43800300 thru 0336	14E
43801300	14E
43806300	14E
43807300	14E

43810300	14E
43811300	14E
43816300	14E
43817300	14E
43820300 thru 0302	14E
43821300	14E
43826300	14E
43827300	14E
44000400 thru 0401	64A
44001400 thru 1405	64A
44040500 thru 0505	14D
44100000 thru 0025	14D
44190600 thru 0610	85A
44230600 thru 0610	64A
44240600 thru 0610	64A
44280600 thru 0602	64A
44290600 thru 0602	64A
44310600 thru 0602	64A
44320600 thru 0602	64A
44330600 thru 0602	64A
44500400	64A
44510000 thru 0024	14D
44511400 thru 1405	64A
44740400	64A
44741400 thru 1405	64A
44750400 thru 0448	64A
44751400 thru 1405	64A
44760400	14E
44770400 thru 0403	14E
44771400	14E
44780400 thru 0403	14E
44781400	14E

SEARS (Cont.)	Set Up
MODELS	
44790400 thru 0403	14E
44791400	14E
44800400 thru 0401	14E
44801500	14E
44810400 thru 0401	14E
44811500	14E
44820400 thru 0401	14E
44821500	14E

CHASSIS	
562-	
10100 thru 105	46E
10130 thru 131	46C
10200 thru 201	
10220 thru 222	32A
10230	46C
10410 thru 412	32A
10420 thru 428	16C
10481 thru 482	40A
10500 thru 512	16C
10520 thru 525	40A

MODELS	
562-	
40081100 thru 1101	16C
40280000 thru 0002	16C
41550000	40A

41660000	40A
41910200 thru 1202	84A
CHASSIS	
564-	
10200 thru 213	8B
80020 thru 030	16B
80070 thru 091	16B
80130 thru 136	16B
80150 thru 152	16D
80153 thru 162	16B

MODELS	
564-	
40570000 thru 0001	16B
40580200 thru 0201	16B
40620200 thru 0201	16B
40630200	16B
40750600 thru 0603	109A
40751700 thru 1703	109A
41102100	16B
41190600 thru 0603	99A
41220000 thru 0002	16B
41221100 thru 1101	16B
41222100 thru 2110	16B
41230100	16B
41690600 thru 0603	99A
41731600 thru 1603	99A
41732700 thru 2703	109A
41900600 thru 0603	99A
42140700 thru 0703	109A
42160700 thru 0703	109A

42200500 thru 0503	99A
42201600 thru 1603	99A
44520700	110A
44570700	110A
44580700	110A
44590700	110A
44630700	110A
44631800	110B
44640700	110A
44641800	110B
44650700	110A
44651800, 661800, 671800, 681800	110B
44690700	110A

SETCHELL CARLSON

CHASSIS	
U800, 802	1C
U803	49A
U804	1C
U805, 806	49A
U807	1C
U808	48A
U809, 810 (Jumper pins 7 & 8 on Yoke Socket)	2C

SHARP

MODELS	
C1226, 27, 28	46B
C1517	54A
C1723, 24, 25	54A
C1727	46F
C1921, 23, 25, 26	54A
C1928, 33	46F
C2010	46A
C2011	46B
C2030	46A
C2031	46B
C6010	46B
C8010	31B
C9310, 11	31B
CJ45P	46A
CN32T	46A
CN52T	31A
CN62T	31B
CU50P	46A
CY61PC	46B
13A29	82C
13A31, 35	82C
13A63	82C
15A45	82C
19A61, A63, A65, A69, A73, A75	82C
19A83, A87	82C
19B66, B70, B74	82C
19C19	46B

SIMPSON SEARS (CANADA)

CHASSIS	
C576-20060, 65, 70, 73, 75	67A
C576-20080	42A
C576-20100	67A

SINGER

MODELS	
HE8001	22A
HE8015	22B
HE8020	22A
HE8030	55B
HE8040	22A
HE8060	38A

SYLVANIA

CHASSIS	
21LC7, LC8, LC9	1C
21VC10	1C
576, 577, 580	1C
D01	1C
D02	11B
D03, D05	10A
D06	11A
D07	10A

D08, D09, D10	11A
D11	10A
D12-1 thru D12-17	11A
D12-20 and D12-21	37A
D13	11A
D14-1 thru D14-5	37A
D14-6 thru D14-18	37A
D15, D16	37A
D17, D18, D19	42A
E01, E02	19D
E03, E04, E05	67A
E06, 07, 08 (Inline)	89A
E09, E10	67A
E11, E12 (30kV)	67A
E20, 21 (Inline)	89A
E22 (28kV)	93A
E23, 24	89A
E25	93A
E40, E41	67A
E42, 44, 45	67A

SYMPHONIC

CHASSIS	
TCT150, 185	16B
TCT190, 195	1C

TEKNIKA

CHASSIS	
CI 3019	84B

TELEDYNE PACKARD BELL

CHASSIS	
98C1	46C
98C3, C4, C6, C7, C8	1C
98C9, C10, C11	2G
98C11A	2J
98C15	2G
98C17, C18, C19	2H
98C21, 22	2H
98C32, C33, C34, C35, C36	2H
98C38	79A
98C39, C40	2G
98C42, C44	79A
98C47	2G
98C53	79A
99C1	1C

MODELS

C9-6248, 49	22A
C9-6346	22A
CQ-322	22D
CQ-522, 524	22D
CQ-622	22B
CQ-634, 638	22A
CQ-964	2H
CR-424, 434, 436	22B
CRQ-310, 312	22B
TL-251	22D
TL-261	22B
1C-524	22C

1C-620, 622	20A
1C-624	22A
3C-132	46D
3C-134	65A
3C-192	16E
3C-194	14D
14C-952	79A

TMA

CHASSIS	
AS-9042	38A

TOSHIBA

CHASSIS	
TAC-1001	46B
TAC-2210	46B
TAC-3230	46B
TAC-3310	32A
TAC-3340, 50, 51, 52	40A
TAC-4320, 21	32A
TAC-4360, 61, 70, 72	40A
TAC-6330, 50, 70	40A
TAC-6510	40A
TAC-7410, 11	40A
TAC-7710, 20	84A
TAC-8640	40A

MODEL

C-1G, C-1S	46B
------------	-----

TRUETONE

Set
Up

MODELS

2DC101	2C
2DC1470 thru 1475	1C
2DC1550 thru 1577	1C
2DC1655 thru 1665A, B, C	1C
2DC1665E, 1667E	2C
2DC1675 thru 1695	2C
2DC1765 thru 1795	2C
2DC1875	2C
2DC2063	14A
2DC2065, 2067	19B
2DC2255	17C
2DC2297, 2299	38A
2DC2487 thru 2499	38A
2DC2587, 2589	38A
2DC2597, 2599	70A
2DC2629	71A
2DC2669	71A
2DC2769, 91, 97, 99	70A
2DC2867	2C
2DC3755	22B
2DC3780	14A
2DC4015	56A
2DC4018	16E
2DC4020	19B
2DC4218	16E
2DC4219	56A
2DC4319	16E
2DC4419, 4420	75A
2DC4513	65A
2DC4519	68A

2DC4815	16B
2DC4914	16E
2DC4955, 4957	16E
ADM2896	96A
EIS2885, 2887	2D
EIS2889	2D
GEC4316	90A
GEC4617 (Inline)	90A
SCJ4713, 4715	82C
SCJ4819, 4820	82C
SCJ4915	82C
SCJ4920, 4922	82C
WEG2769	70A
WEG2769B-87	104A
WEG2791C, 2797C, 2799B-87	104A
WEG2865	1C
WEG2887	38A
WEG2889	38A

WARDS AIRLINE

CHASSIS

918-215099	3A
GAI-12242, 43	3B
GAI-12305	19C
GAI-12335 (Inline)	88A
GAI-12344	73A
GAI-12423, 62	19A
GAI-12643, 53	19C
GAI-12744	73A
GAI-12745 (Inline)	88A
GAI-12803	19A

GAI-12844	73A
GAI-12863	17A
GAI-12904, 14, 24, 84	63A
GAI-12905, 35, 45, 95	88A
(Inline)	
GAI-12915, 25	74A
GAI-12933	19A
GAI-16425, 26, 55 (30kV)	80A
GAI-16523, 53	63A
GAI-16622, 42, 52	17C
GAI-17025	63A
GAI-17144	63A
GAI-17145, 46	80A
GAI-17224, 43, 54	63A
GAI-17225, 55	80A
GAI-17227	96A
GAI-17323, 24, 53, 54	63A
GAI-17423, 24, 43, 44, 53, 54	63A
GAI-17425, 45, 55	80A
GAI-17536	80A
GAI-17623, 53	63A
GAI-17725, 35, 55	80A
GAI-17825, 35, 45, 55	80A
GAI-17833, 43, 53	63A
GAI-17933, 43, 53	63A
GCI-12102	3B
GCI-12420, 60	3A
GCI-15540	2B
GCI-15820, 40, 50	2B
GCI-15921	17C
GCI-16322, 42	17C
GCI-16522, 42, 52	17C

GCI-17241A, B	3A
GCI-17321, 41, 51	3A
GCI-17322, 42, 52	17C
GCI-17420	2B
GCI-17421	3A
GCI-17422, 42, 52	19A
GCI-17440, 50	2B
GCI-17441, 51	3A
GCI-17521, 31, 41, 51	17C
GCI-17522, 32, 42, 52	19A
GCI-17620, 40, 50	2B
GCI-17821, 22, 32, 41, 42, 51, 52	19A
GCI-17921, 22, 32, 41, 42, 51, 52	19A
GCU-12934, 44, 54	62A
GEN-8077	46A
GEN-8147, 56, 57	46A
GEN-8447	46A
GEN-12069	54B
GEN-12069A, B	54B
GEN-12200, 49	46A
GEN-12241, 12340	31B
GEN-12337	82C
GEN-12349	54B
GEN-12440, 41, 42	31A
GEN-12557	82C
GEN-12743A	54A
GEN-12907, 927, 937	82C
GEN-17140, 50	31B
GGV-12813A	20A
GGV-12934	62B
GGV-12944, 54	62B

WARDS AIRLINE (Cont.)

Set
Up

CHASSIS

GGY-17033 (Inline)	89A
GHJ-7147, 57	1C
GHJ-7347, 57	2C
GHJ-7447, 57, 77	2C
GHJ-7527, 37, 47, 57	2C
GHJ-7747, 57	2C
GHJ-7927, 77	2C
GHJ-8046, 87, 96, 97	1C
GHJ-8116, 46, 56	1C
GHJ-8216, 46, 56	1C
GHJ-8247	2C
GHJ-8256	1C
GHJ-8257	2C
GHJ-8316, 46, 56	1C
GHJ-8446, 56, 76	2C
GHJ-8546, 56	2C
GHJ-8647, 57	2C
GHJ-8746	2C
GHJ-8827, 47, 57	2C
GHJ-15829, 49, 59	2C
GHJ-17098	1C
GHJ-17220, 40, 50	3A
GHJ-17349, 59	3A
GHJ-17420, 28	2C
GHJ-17429	3A
GHJ-17430, 40, 48, 50, 58	2C
GHJ-17449, 59	3A

GHJ-17528, 48, 58	2C
GHJ-17529, 49, 59	3A
GHJ-17620, 29, 40, 49	2C
GHJ-17650, 59	2C
GHJ-17749, 59, 79	2C
GHJ-17829, 49, 59	3A
GHJ-17949, 59	3A
GMW-7627, 47, 57	2C
GMW-8747	2C
GMW-17249	1C
GMW-17528, 48, 58	2C
GTC-7354	1C
GTC-7444	1C
GTC-7574	1C
GTC-8015, 45, 55, 85, 95	1C
GTC-8115, 45	1C
GTC-8245, 55	1C
GTC-8354	1C
GTC-8444	1C
GTC-8574	1C
GTC-8874	1C
WG-7094	1C
WG-7144, 53, 54	1C
WG-7314, 44	1C
WG-7413, 43	1C
WG-8094	1C
WG-8144, 53, 54, 55	1C
WG-8314, 44	1C
WG-8413, 43	1C
WG-8843	1C
WG-17196	70A

WEBCOR

MODEL

TV5018, 5118	16B
--------------	-----

WESTINGHOUSE

CHASSIS

V-2441, 2473, 2476	1A
V-2488	1C
V-2489	14A
V-2515	1A
V-2650-1, -2, -3	1C
V-2650-8	12A
V-2655, 2656	24A
X-2650	12A

XAM

CHASSIS

1872	20A
------	-----

ZAYRE

CHASSIS

2M272, 373	20A
------------	-----

ZENITH

CHASSIS

4B25C19	39A
12A8C14	29D
12A10C15	29B
12A12C52	29A
12A13C52 (Early Prod.)	29A
12A13C52 (Late Prod.)	39A
12B8C15	29D
12B9C16	29D
12B13C52	39A
12B14C50, C52	39A
13GC10 (Inline)	94A
13HC10 (Inline)	94A
14A9C17, C19, C29	29C
14A9C50, C51	29A
14A10C17, C19, C29	29C
14B9C50	39A
14CC14, CC15, CC16	29D
14DC15, DC16	29D
14Z8C50	29A
15WFR55	69A
15Y6C15	29C
16Z7C17	29B
16Z7C17Z	29C
16Z7C18	29B
16Z7C19	29B
16Z7C19Z	29C
16Z7C50	29A
16Z8C19	29C

ZENITH (cont.)	Set	23EC15	39A
	Up	23FC45 (30kV)	69A
CHASSIS		23GC45 (30kV)	69A
		23HC45, HC50	69A
16Z8C50	29A	23XC36, XC38	13A
17EC45	69A	24MC32, MC42	1K
17FC35, FC45	69A	24NC31	1K
17GC45	69A	25CC25, CC50	39A
17HC55 (Inline)	94A	25CC55	39B
17KC55	94A	25DC56, DC57, DC58	39B
18CC29, CC30	29C	25EC45 (30kV)	69A
19CC19	39A	25EC58	39B
19DC11, DC12, DC20, DC21, DC22	39A	25FC45, FC46 (30kV)	69A
19EB12, EB13	39A	25GC45, GC48, GC50 (30kV)	69A
19EC13, EC22	39A	25HC45, HC50	69A
19EC45	69A	25JC45, JC49	69B
19FC35, FC45, FC46	69A	25LC20, LC30	1K
19GC38, GC45, GC48, GC50 (30kV)	69A	25MC30, MC33	1K
19HC38, 48	69A	25MC36	13A
19HC45	69B	25MC43	1K
19HC50, HC55	94B	24MC46	13A
19JC55, JC60	94B	25MC70	1K
19KC48	69B	25NC37, NC38	13A
19KC50	94B	26KC20	1K
20BC50	39A	27KC20	1K
20CC50	39A	29JC20	1K
20X1C36, C38	13A		
20Y1C37, C38, C48, C50	13A		
20Z1C37	13A		
23DC14	39A		

MODEL 1520 FINE-TUNED AUTOFORMER FOR CHEK-A-COLOR TEST JIGS

Yoke inductances are proliferating. To achieve good yoke matches with the patented Sylvania yoke programmer system, we have fine-tuned the yoke-program autoformer to yield the following inductances:

	INDUCTANCE	INTER-CONNECTED PINS		INDUCTANCE	INTER-CONNECTED PINS
YP05	340 μ H	1-2-8, 3-4-5, 6-7	YP5	4.9 mH	1-5, 2-3, 4-8, 6-7
YP07	650 μ H	1-2-8, 3-4-6, 5-7	YP7	6.0 mH	1-2-6, 3-4-8, 5-7
YP1A	1.1 mH	1-8, 2-3, 4-5, 6-7	YP10	9.9 mH	1-2-5, 3-4-6, 7-8
YP1	1.4 mH	1-2-5, 3-4-8, 6-7	YP12	12.6 mH	1-7, 2-3
YP2	2.0 mH	1-8, 2-3, 4-6, 5-7	YP16	21.0 mH	1-2-6, 3-4-5, 7-8
YP3	3.1 mH	1-2-7, 3-4	YP19	19.0 mH	1-5, 2-3, 4-6, 7-8

The fine-tuned autoformer is orange or brown in color. It will be found in all Model CK3000, all CK1900X, all YPK6, and most CK1500X. The earliest CK1500X may have a black or green autoformer. We suggest that the black or green autoformers be replaced with brown. The Model 1520 Autoformer is available through Sylvania Distributors.

	CK1500X CK1900X	CK3000
YOKE EXTENSION	BD201	B207
SPECIAL EXTENSION	B202	B208
CONVERGENCE EXTENSION	BC201	None
CRT EXTENSION	B213	B230

SETUP NO.	YOKE PROGRAMMER	DEFL. YOKE ADAPTER/EXT	CONVERGENCE ADAPTER	BALLAST CK3000 ONLY	PICTURE TUBE ADAPTER/EXT	SPECIAL INSTRUCTIONS
1A	YP12	A112/Yoke Ext.	Direct	CVL1	A113/CRT Ext.	
1B	YP12	A112/Yoke Ext.	Direct	CVL1	A113/CRT Ext.	
1C	YP12	A112/Yoke Ext.	Direct	CVL1	A113/CRT Ext.	
1D	YP12	A112/Yoke Ext.	C301 or CC01	CVL2	A113/CRT Ext.	
1E	YP12	A112/Yoke Ext.	Direct	CVL3	A113/CRT Ext.	
1F	YP12	A112/Yoke Ext.	C307 or CC07	CVL1	A113/CRT Ext.	
1G	YP12	A112/Yoke Ext.	C309 or CC09	CVL1	A113/CRT Ext.	
1H	YP12	A112/Yoke Ext.	C312 or CC12	CVL3	A113/CRT Ext.	
1J	YP12	A112/Yoke Ext.	C312 or CC12	CVL3	A113/CRT Ext.	

SETUP NO.	YOKE PROGRAMMER	DEFL. YOKE ADAPTER/EXT	CONVERGENCE ADAPTER	BALLAST CK3000 ONLY	PICTURE TUBE ADAPTER/EXT	SPECIAL INSTRUCTIONS
1K	YP12	A112/Yoke Ext.	C319 or CC19	CVL1	A113/CRT Ext.	
1L	YP12	A112/Yoke Ext.	C345 or CC12	CVL1	A113/CRT Ext.	
1M	YP12	A112/Yoke Ext.	Do Not Connect		A113/CRT Ext.	
2A	YP12	Yoke Ext.	Direct	CVL1	CRT Ext.	
2B	YP12	Yoke Ext.	Direct	CVL1	CRT Ext.	
2C	YP12	Yoke Ext.	Direct	CVL1	CRT Ext.	
2D	YP12	Yoke Ext.	C300 or CC01	CVL3	CRT Ext.	
2E	YP12	Yoke Ext.	Direct	CVL3	CRT Ext.	
2F	YP12	Yoke Ext.	C307 or CC07	CVL1	CRT Ext.	
2G	YP12	Yoke Ext.	C307 or CC07	CVL1	CRT Ext.	
2H	YP12	Yoke Ext.	C313 or CC07	CVL1	CRT Ext.	
2J	YP12	Yoke Ext.	C334 or CC07	CVL1	CRT Ext.	
3A	YP12	C307/Yoke Ext.	Direct	CVL1	CRT Ext.	
3B	YP12	C307/Yoke Ext.	C300 or CC01	CVL3	CRT Ext.	
4A	YP12	D404/Yoke Ext.	C305 or CC05	CVL1	CRT Ext.	
5A	YP12	D406/Yoke Ext.	C307 or CC07	CVL1	CRT Ext.	
6A	YP12	D408/Yoke Ext.	C309 or CC09	CVL1	CRT Ext.	

SETUP

SETUP NO.	YOKE PROGRAMMER	DEFL. YOKE ADAPTER/EXT	CONVERGENCE ADAPTER	BALLAST CK3000 ONLY	PICTURE TUBE ADAPTER/EXT	SPECIAL INSTRUCTIONS
6B	YP12	D408/Yoke Ext.	C349 or CC49	CVL1	CRT Ext.	YEL & BLK-YEL = VERT RED & BLU = HORIZ BLK & GRAY = PINCUSH. VIOLET = HORIZ C.T.
6C	YP12	D408/Yoke Ext.	C359 or CC09	CVL1	CRT Ext.	
6D	YP12	D408/Yoke Ext.	Do Not Connect		CRT Ext.	
7A	YP12	D410/Yoke Ext.	C309 or CC09	CVL1	CRT Ext.	
8A	YP12	D411/Yoke Ext.	C312 or CC12	CVL3	CRT Ext.	
8B	YP12	D411/Yoke Ext. Do Not Use Color Code	Direct	CVL1	CRT Ext.	
9A	YP12	D414/Yoke Ext.	Direct	CVL1	CRT Ext.	
10A	YP12	D415/Yoke Ext.	Direct	CVL1	CRT Ext.	
11A	YP12	D416/Yoke Ext.	Direct	CVL1	CRT Ext.	
11B	YP12	D416/Yoke Ext.	C317 or CC17	CVL1	CRT Ext.	
12A	YP12	D418/Yoke Ext.	Direct	CVL1	CRT Ext.	
13A	YP12	D420/Yoke Ext.	C321 or CC19	CVL1	CRT Ext.	
14A	YP12	D422/Yoke Ext.	Direct	CVL1	CRT Ext.	
14B	YP12	D422/Yoke Ext.	Do Not Connect		CRT Ext.	
14C	YP12	D422/Yoke Ext.	C321 or CC19	CVL1	CRT Ext.	

SETUP

SETUP NO.	YOKE PROGRAMMER	DEFL. YOKE ADAPTER/EXT	CONVERGENCE ADAPTER	BALLAST CK3000 ONLY	PICTURE TUBE ADAPTER/EXT	SPECIAL INSTRUCTIONS
14D	YP12	D422/Yoke Ext.	C353 or CC01	CVL1	CRT Ext.	Warning: Do Not Jumper Degaussing C346/CC46 No Longer Available Warning: Do Not Jumper Degaussing
14E	YP1	D422/Yoke Ext.	Do Not Connect		CRT Ext.	
14F	YP12	D422/Yoke Ext.	Do Not Connect		CRT Ext.	
15A	YP12	D423/Yoke Ext.	Direct	CVL1	CRT Ext.	
16A	YP12	D424/Yoke Ext.	Direct	CVL1	CRT Ext.	
16B	YP12	D424/Yoke Ext.	Direct	CVL1	CRT Ext.	
16C	YP12	D424/Yoke Ext.	C346 or CC46 or Jumper Pins 2 and 5	CVL1	CRT Ext.	
16D	YP12	D424/Yoke Ext.	C324 or CC24	CVL1	CRT Ext.	
16E	YP12	D424/Yoke Ext.	C310 or CC10	CVL1	CRT Ext.	
16F	YP1	D424/Yoke Ext.	Do Not Connect		CRT Ext.	
17A	YP12	D425/Yoke Ext.	Direct	CVL1	CRT Ext.	
17B	YP12	D425/Yoke Ext.	Direct	CVL1	CRT Ext.	
17C	YP12	D425/Yoke Ext.	C328 or CC28	CVL3	CRT Ext.	
17D	YP12	D425/Yoke Ext.	C353 or CC01	CVL1	CRT Ext.	

SETUP

SETUP NO.	YOKE PROGRAMMER	DEFL. YOKE ADAPTER/EXT	CONVERGENCE ADAPTER	BALLAST CK3000 ONLY	PICTURE TUBE ADAPTER/EXT	SPECIAL INSTRUCTIONS
18A	YP12	D426/Yoke Ext.	C312 or CC12	CVL3	CRT Ext.	
19A	YP12	D427/Yoke Ext.	C300 or CC01	CVL3	CRT Ext.	
19B	YP12	D427/Yoke Ext.	C328 or CC28	CVL3	CRT Ext.	
19C	YP12	D427/Yoke Ext.	C353 or CC01	CVL1	CRT Ext.	
19D	YP1	D468/Yoke Ext.	Direct	CVL1	CRT Ext.	
19E	YP12	D427/Yoke Ext.	Load Vert Output Cathode Per Spec Inst.		CRT Ext.	Load: Parallel 50 μ F and 4700 Ohms to Ground
20A	YP12	D429/Yoke Ext.	C307 or CC07	CVL1	CRT Ext.	
20B	YP1	D429/Yoke Ext.	Do Not Connect		CRT Ext.	
21A	YP12	D430/Yoke Ext.	C309 or CC09	CVL1	CRT Ext.	
21B	YP12	D430/Yoke Ext.	Do Not Connect See Spec. Inst.		CRT Ext.	Add 150 Ohms from Vert Output Cathode to Ground
22A	YP12	D431/Yoke Ext.	C332 or CC32	CVL1	CRT Ext.	
22B	YP7	D431/Yoke Ext.	C332 or CC32	CVL1	CRT Ext.	Warning: Do Not Jumper Degaussing
22C	YP12	D431/Yoke Ext.	C360 or CC60	CVL1	CRT Ext.	
22D	YP12	D431/Yoke Ext.	Do Not Connect		CRT Ext.	
22E	YP1	D431/Yoke Ext.	Do Not Connect		CRT Ext.	

SETUP

SETUP NO.	YOKE PROGRAMMER	DEFL. YOKE ADAPTER/EXT	CONVERGENCE ADAPTER	BALLAST CK3000 ONLY	PICTURE TUBE ADAPTER/EXT	SPECIAL INSTRUCTIONS
23A	YP12	D433/Yoke Ext.	Direct	CVL1	CRT Ext.	
23B	YP12	D433/Yoke Ext.	C353 or CC01	CVL1	CRT Ext.	
23C	YP12	D433/Yoke Ext.	Do Not Connect		CRT Ext.	
24A	YP12	D435/Yoke Ext.	Direct	CVL1	CRT Ext.	
25A	YP12	D437/Yoke Ext.	Do Not Connect		CRT Ext.	
26A	YP12	D438/Yoke Ext.	Do Not Connect		CRT Ext.	
27A	YP12	D439/Yoke Ext.	Do Not Connect		CRT Ext.	
28A	YP12	D440/Yoke Ext.	Do Not Connect		CRT Ext.	
29A	YP12	D441/Yoke Ext.	C319 or CC19	CVL1	CRT Ext.	
29B	YP12	D441/Yoke Ext.	C342 or CC42	CVL1	CRT Ext.	
29C	YP12	D441/Yoke Ext.	C350 or CC42	CVL1	CRT Ext.	
29D	YP12	D441/Yoke Ext.	C341 or CC41	CVL1	CRT Ext.	
30A	YP12	D443/Yoke Ext.	Direct	CVL1	CRT Ext.	
31A	YP12	D444/Yoke Ext.	Direct	CVL1	CRT Ext.	
31B	YP12	D444/Yoke Ext.	C306 or CC06	CVL1	CRT Ext.	
32A	YP12	D447/Yoke Ext.	C346 or CC46 or Jumper Pins 2 and 5	CVL1	CRT Ext.	C346 and CC46 No Longer Available

SETUP

SETUP NO.	YOKE PROGRAMMER	DEFL. YOKE ADAPTER/EXT	CONVERGENCE ADAPTER	BALLAST CK3000 ONLY	PICTURE TUBE ADAPTER/EXT	SPECIAL INSTRUCTIONS
33A	YP12	D448/Yoke Ext.	Direct	CVL1	CRT Ext.	
34A	YP05	D451/Yoke Ext.	Do Not Connect		CRT Ext.	
34B	YP12	D451/Yoke Ext.	Do Not Connect		CRT Ext.	
35A	YP12	D452/Yoke Ext.	Direct	CVL1	CRT Ext.	
35B	YP12	D452/Yoke Ext.	Do Not Connect		CRT Ext.	
36A	YP12	D454/Yoke Ext.	Direct	CVL1	CRT Ext.	
37A	YP12	D455/Yoke Ext.	Direct	CVL1	CRT Ext.	
38A	YP12	D456/Yoke Ext.	C328 or CC28	CVL3	CRT Ext.	
39A	YP12	D457/Yoke Ext.	C319 or CC19	CVL1	CRT Ext.	
39B	YP3	D457/Yoke Ext.	C319 or CC19	CVL1	CRT Ext.	
40A	YP12	D458/Yoke Ext.	C346 or CC46 or Jumper Pins 2 and 5	CVL1	CRT Ext.	Warning: Do Not Jumper Degaussing C346 and CC46 No Longer Available
41A	YP05	D401/Yoke Ext.	Do Not Connect		CRT Ext.	
42A	YP12	D400/Yoke Ext.	Direct	CVL4	CRT Ext.	Warning: Do Not Jumper Degaussing
43A	YP12	D402/Yoke Ext.	Direct	CVL1	CRT Ext.	
43B	YP16	D402/Yoke Ext.	Direct	CVL1	CRT Ext.	

SETUP

SETUP NO.	YOKE PROGRAMMER	DEFL. YOKE ADAPTER/EXT	CONVERGENCE ADAPTER	BALLAST CK3000 ONLY	PICTURE TUBE ADAPTER/EXT	SPECIAL INSTRUCTIONS
44A	YP05	D403/Yoke Ext.	C308 Plug		CRT Ext.	
44B	YP1	D403/Yoke Ext.	C308 Plug		CRT Ext.	
44C (1500 Only)	YP3	D403/YPK6/ Yoke Ext.	C308 Plug		CRT Ext.	
44D	YP05	D403/Yoke Ext.	Jumper Pins 2 and 8		CRT Ext.	
45A	YP12	D405/Yoke Ext.	Direct	CVL1	CRT Ext.	
46A	YP12	D446/Yoke Ext.	Direct	CVL1	CRT Ext.	
46B	YP12	D446/Yoke Ext.	C306 or CC06	CVL1	CRT Ext.	
46C	YP12	D446/Yoke Ext.	C346 or CC46 or Jumper Pins 2 and 5	CVL1	CRT Ext.	C346 and CC46 No Longer Available
46D	YP12	D446/Yoke Ext.	C310 or CC10	CVL1	CRT Ext.	
46E	YP12	D446/Yoke Ext.	150 Ohms from Pin 10 to Ground		CRT Ext.	
46F	YP12	D446/Yoke Ext.	C314 or CC14	CVL1	CRT Ext.	
47A	YP12	D461/Yoke Ext.	C360 or CC60	CVL1	CRT Ext.	
48A	YP12	D463/Yoke Ext.	Direct	CVL1	CRT Ext.	

SETUP

SETUP NO.	YOKE PROGRAMMER	DEFL. YOKE ADAPTER/EXT	CONVERGENCE ADAPTER	BALLAST CK3000 ONLY	PICTURE TUBE ADAPTER/EXT	SPECIAL INSTRUCTIONS
49A	YP12	D464/Yoke Ext.	Direct	CVL1	CRT Ext.	
50A	YP Plug is part of D466	D466/Yoke Ext.	Do Not Connect		CRT Ext.	Jumper Degaussing or Resistor Will Overheat
51A	YP12	D467/Yoke Ext.	Do Not Connect		CRT Ext.	Jumper Degaussing or Resistor Will Overheat
52A	YP12	D467/Yoke Ext.	Do Not Connect		CRT Ext.	
53A	YP12	D469/Yoke Ext.	C370 or CC70	CVL1	CRT Ext.	
54A	YP12	D413/Yoke Ext.	C314 or CC14	CVL1	CRT Ext.	
54B	YP12	D413/Yoke Ext.	Direct	CVL1	CRT Ext.	Remove Pin 7 of D413
55A	YP12	D417/Yoke Ext.	Do Not Connect		CRT Ext.	
55B	YP12	D417/Yoke Ext.	Do Not Connect		CRT Ext.	
56A	YP12	D419/Yoke Ext.	Do Not Connect		CRT Ext.	
57A	YP12	D409/Yoke Ext.	C309 or CC09	CVL1	CRT Ext.	
57B	YP12	D409/Yoke Ext.	Do Not Connect		CRT Ext.	
58A	YP12	D412/Yoke Ext.	Do Not Connect		CRT Ext.	
59A	YP1	D449/Yoke Ext.	Do Not Connect		CRT Ext.	
60A	YP1	D421/Yoke Ext.			CRT Ext.	

SETUP

SETUP NO.	YOKE PROGRAMMER	DEFL. YOKE ADAPTER/EXT	CONVERGENCE ADAPTER	BALLAST CK3000 ONLY	PICTURE TUBE ADAPTER/EXT	SPECIAL INSTRUCTIONS
60B	YP1	D421/Yoke Ext.	C325 Plug		B232/CRT Ext.	Quintrex CRT
61A (1500 Only)	YP3	D428/YPK6/Yoke Ext.	Direct	CVL1	CRT Ext.	
61B	YP05	D428/Yoke Ext.	Direct	CVL1	CRT Ext.	
61C Phil	YP05	D428/Yoke Ext.	*C372	CVL3	CRT Ext.	
62A	YP1	DC462 COMB/Yoke Ext.	Do Not Connect		CRT Ext.	Deflection, Yellow Socket Convergence, Black Socket
62B	YP3	DC462 COMB/Yoke Ext.	Do Not Connect		CRT Ext.	Deflection, Yellow Socket Convergence, Black Socket
63A	YP12	DC60 Combination	Direct	CVL3/Blk Skt	CRT Ext.	Deflection, Yellow Socket Convergence, Black Socket
64A	YP3	D432/Yoke Ext.	Do Not Connect		CRT Ext.	
65A	YP1	D453/Yoke Ext.	Do Not Connect		CRT Ext.	
65B	YP12	D453/Yoke Ext.	Jumper Pins 9 and 10		CRT Ext.	
66A	YP1 or YP3	D434/Yoke Ext.	150 Ohms Pin 3 to 5		CRT Ext.	
67A	YP1	D407/Yoke Ext.	Ground Pin 3		CRT Ext.	

SETUP

SETUP NO.	YOKE PROGRAMMER	DEFL. YOKE ADAPTER/EXT	CONVERGENCE ADAPTER	BALLAST CK3000 ONLY	PICTURE TUBE ADAPTER/EXT	SPECIAL INSTRUCTIONS
68A	YP12	D436/Yoke Ext.	C307 or CC07	CVL1	CRT Ext.	
69A	YP3	D442/Yoke Ext.	C319 or CC19	CVL1	CRT Ext.	
69B Zen	YP3	D442/Yoke Ext.	None		CRT Ext.	
70A	YP07	D470/Yoke Ext.	CC69 Plug		CRT Ext.	
71A	YP12	D471/Yoke Ext.	C371 or CC71	CVL1	CRT Ext.	
72A	YP3	DC72 Combination	Direct - Blk Skt	CVL5/ Blk Skt	CRT Ext.	Deflection, Yellow Socket Convergence, Black Socket
73A	YP12	D473/Yoke Ext.	150 Ohms from A to C		CRT Ext.	
74A	YP12	D474/Yoke Ext.	150 Ohms from A to C		CRT Ext.	
75A	YP12	D475/Yoke Ext.	C371 or CC71	CVL1	CRT Ext.	
76A	YP1A	D476/Yoke Ext.	Do Not Connect		CRT Ext.	
77A	YP1	D445/Yoke Ext.	Do Not Connect		CRT Ext.	
78A	YP1	D459/Yoke Ext.	Do Not Connect		CRT Ext.	
79A	YP3	D450/Yoke Ext.	Do Not Connect		CRT Ext.	
80A	YP1	DC65 Combination	Direct - Blk Skt	CVL5/ Blk Skt	CRT Ext.	Deflection, Yellow Socket Convergence, Black Socket

SETUP

SETUP NO.	YOKE PROGRAMMER	DEFL. YOKE ADAPTER/EXT	CONVERGENCE ADAPTER	BALLAST CK3000 ONLY	PICTURE TUBE ADAPTER/EXT	SPECIAL INSTRUCTIONS
81A	YP1	D481/Yoke Ext.	Do Not Connect		CRT Ext.	
82A	YP1	*D482/Yoke Ext.	Do Not Connect		CRT Ext.	
82B	YP12	*D482/Yoke Ext.	Load Vert Output Cathode Per Spec. Inst.		CRT Ext.	100 Ohms Cathode to Ground
82C [#]	YP1 or YP2	*D482/V508/ Spec. Ext.	None		B234J/ CRT Ext.	65 mH toward Chassis
83A	YP12	D483/Yoke Ext.	Load Vert Output Cathode Per Spec. Inst.		CRT Ext.	50 μ F Cathode to Ground
84A [#]	YP1	D484/V508/ Spec. Ext.	C346 or CC46 or Jumper Pins 2 and 5	CVL1	CRT Ext.	65 mH toward Chassis C346 or CC46 No Longer Available
84B [#]	YP1	D484/V508/ Spec. Ext.	Jumper Pins 3 and 4		CRT Ext.	65 mH toward Chassis
85A [#]	YP07	D485/V508/ Spec. Ext.	No Convergence		B231/CRT Ext.	1.2 mH toward Chassis
86A [#]	YP07	D486/V508/ Spec. Ext.	No Convergence		B231/CRT Ext.	1.2 mH toward Chassis
87A [#]	YP05	D487/V508/ Spec. Ext.	No Convergence		B231/CRT Ext.	1.9 mH toward Chassis

SETUP

SETUP NO.	YOKE PROGRAMMER	DEFL. YOKE ADAPTER/EXT	CONVERGENCE ADAPTER	BALLAST CK3000 ONLY	PICTURE TUBE ADAPTER/EXT	SPECIAL INSTRUCTIONS
88A#	YP07	D488/V508/ Spec. Ext.	None		B231/CRT Ext.	1.9 mH toward Chassis
89A#	YP1	D489/V508/ Spec. Ext.	None		B233/CRT Ext.	1.9 mH toward Chassis
90A#	YP1	D490/V508/ Spec. Ext.	None		B233/CRT Ext.	1.9 mH toward Chassis
91A#	YP07	D491/V508/ Spec. Ext.	None		B231/CRT Ext.	1.2 mH toward Chassis
92A#	YP1	D492/V508/ Spec. Ext.	Jumper Pins 1 and 2		B232/CRT Ext.	65 mH toward Chassis
92B#	YP1	D492/V508/ Spec. Ext.	5 Ohms, 1-Watt Between Pins 3 and 4		B232/CRT Ext.	65 mH toward Chassis
92C#	YP1	D492/V508/ Spec. Ext.	Jumper Pins 1 and 2		CRT Ext.	65 mH toward Chassis
92D#	YP1	D492/V508/ Spec. Ext.	Jumper Pins 1 and 2		B233/CRT Ext.	65 mH toward Chassis
92E#	YP1	D492/V508/ Spec. Ext.	No Convergence		B234J/CRT Ext. Japanese InL.	65 mH toward Chassis
92F# Qua	YP1	D492/V508/ Spec. Ext.	None		*B237/CRT Ext.	65 mH toward Chassis

SETUP

SETUP NO.	YOKE PROGRAMMER	DEFL. YOKE ADAPTER/EXT	CONVERGENCE ADAPTER	BALLAST CK3000 ONLY	PICTURE TUBE ADAPTER/EXT	SPECIAL INSTRUCTIONS
92G# Pana	YP1	D492/V508/ Spec. Ext.	None		*B238/CRT Ext.	65 mH toward Chassis
93A	YP1	D493/Yoke Ext.	None		CRT Ext.	
94A	YP1 or YP1A	D494/Yoke Ext.	None		B231/CRT Ext.	
94B Zen	YP1	D494/Yoke Ext.	None		*B236/CRT Ext.	
95A#	YP1	D495/V508/ Spec. Ext.	39 Ohms from Pins 3 to 4		CRT Ext.	65 mH toward Chassis
96A	YP1	D496/Yoke Ext.	None		CRT Ext.	
97A	YP07	D497/Yoke Ext.	No Convergence		CRT Ext.	
98A	YP07	D498/Yoke Ext.	Jumper Pins 3 and 4		B233/CRT Ext.	
99A#	YP1 or YP2	D499/V508/ Spec. Ext.	None		B234J/CRT Ext. Japanese InL.	65 mH toward Chassis - See chart page 17 for YP2
100A	---	110 Degree CRT - own cabinet	Not adaptable - use following extensions and sets			
		BC201	BD201		B249	A150 Anode Extension
101A# GE	YP1	*D4101/V508/ Spec. Ext.	None		B233/CRT Ext.	1.9 mH toward Chassis

SETUP

SETUP NO.	YOKE PROGRAMMER	DEFL. YOKE ADAPTER/EXT	CONVERGENCE ADAPTER	BALLAST CK3000 ONLY	PICTURE TUBE ADAPTER/EXT	SPECIAL INSTRUCTIONS
102A Adm	YP3	*D4102/Yoke Ext.	None		CRT Ext.	
103A RCA	YP1	*D4103/Yoke Ext.	*CVL6 Plug		CRT Ext.	
104A Wel G	YP07	*D4104/Yoke Ext.	Jump 3 and 4		CRT Ext.	
105A Adm	YP1	*D4105/V509/ Spec. Ext.	Jump 3 and 4		CRT Ext.	100 mH toward Chassis Late Production, Use B233 CRT Adapter
106A Adm	YP2	*D4106/V509/ Spec. Ext.	None		B234/CRT Ext.	100 mH toward Chassis
107A RCA	YP1 or YP2	*D4107/Yoke Ext.	None		B231/CRT Ext.	
108A Qua	YP1 or YP2	*D4108/V509/ Spec. Ext.	None		B234/CRT Ext.	100 mH toward Chassis
109A San	YP1 or YP2	*D4109/V509/ Spec. Ext.	None		B234/CRT Ext.	100 mH toward Chassis
110A San	YP1	*D4110/V509/ Spec. Ext.	Jump 3 and 4		CRT Ext.	100 mH toward Chassis

SETUP

SETUP NO.	YOKE PROGRAMMER	DEFL. YOKE ADAPTER/EXT	CONVERGENCE ADAPTER	BALLAST CK3000 ONLY	PICTURE TUBE ADAPTER/EXT	SPECIAL INSTRUCTIONS
110B Sears	YP1	*D4110/V509/ Spec. Ext.	Jump 3 and 4		*B236/CRT Ext.	100 mH toward Chassis

* New Adapters

Inline set requires basic inline kit and appropriate CRT adapter. Inline kit for CK1500X is K525 (V508/509, B202). Inline kit for CK3000 is K625 (V508/509, B208).