



These diagrams were in a packet that came with the Tradivision set

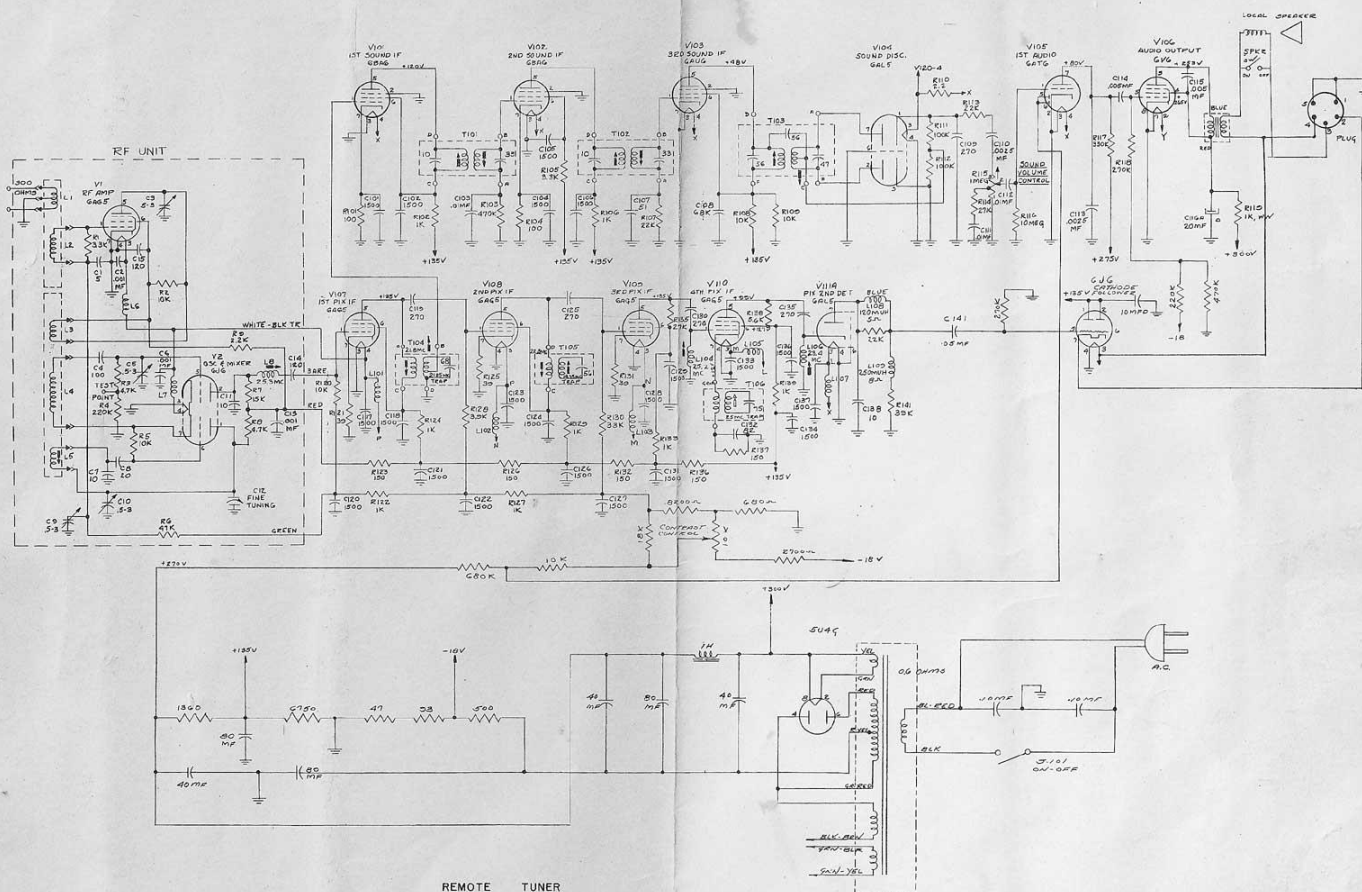


REMOTE TUNER
TRADIOVISION MODEL NO. 13 & 14 R
TRAD TELEVISION CORP. ASBURY PARK, N. J.

FIG. 2



TRADIOVISION MODEL NO. 13

— SEQUENCE OF OPERATIONS - SCREEN —

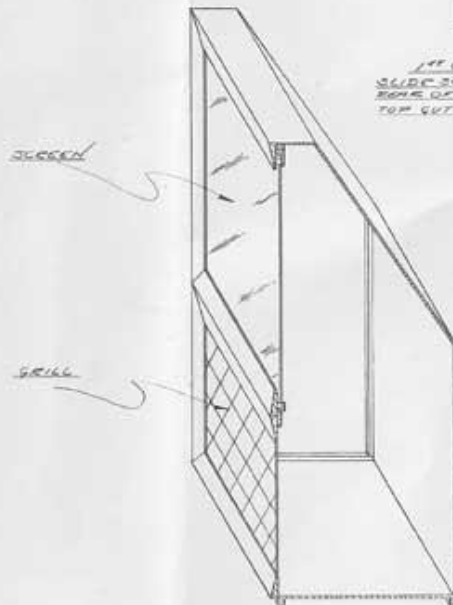

1ST OPERATION
 SLIDE SCREEN THRU
 HOLE OF CABINET TO
 TOP GUTTER.



2ND OPERATION
 SLIDE SCREEN UP INTO
 GUTTER PLUG WITH
 FACE OF CABINET



3RD OPERATION
 SLIDE SCREEN DOWN INTO
 LOWER GUTTER. CENTER SCREEN
 / SECURE INTO POSITION WITH SCREW

— SEQUENCE OF OPERATION - FRONT GRILL —






1ST OPERATION
 PULL FORWARD & SLIDE OUT
 FROM DETACHABLE HINGE





2ND OPERATION
 SLIDE TO HINGE SNAP SHUT
 / SECURE WITH SCREW

FIG. 7

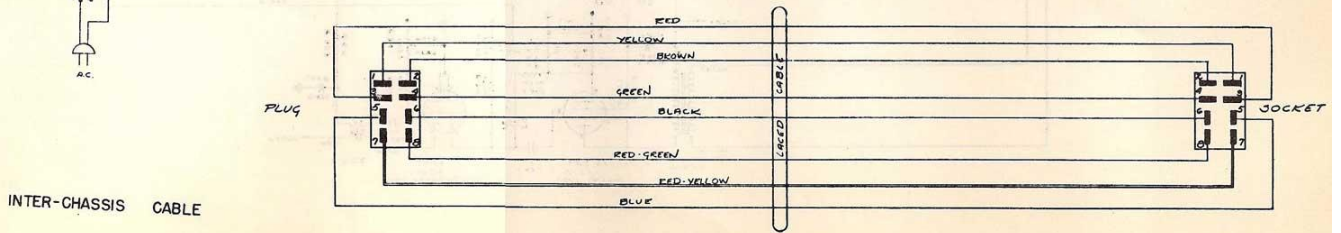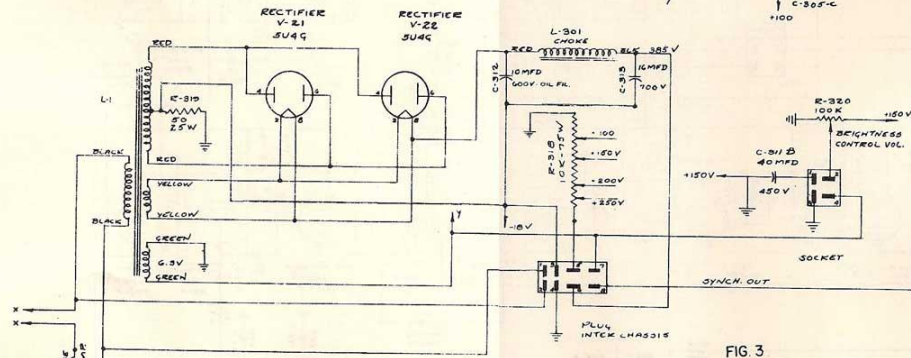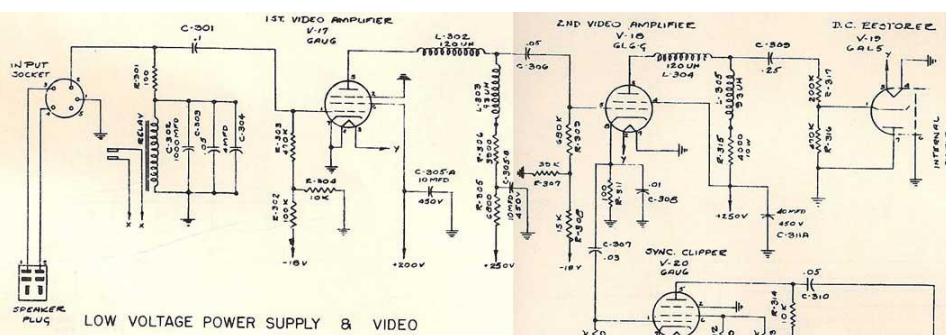

MODELS 13

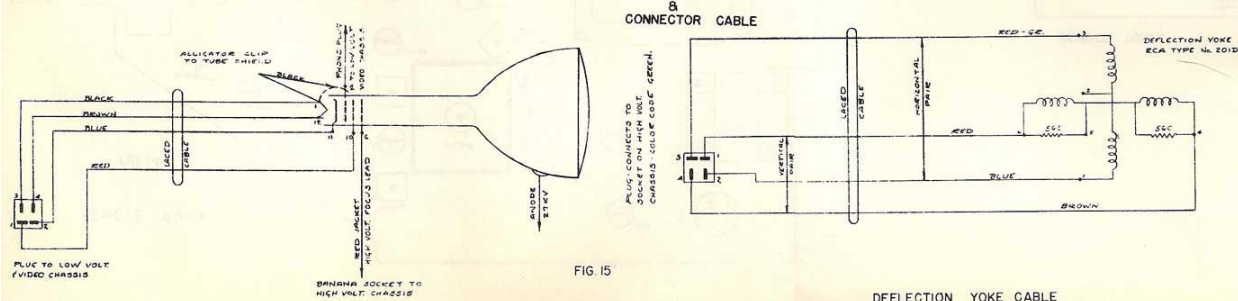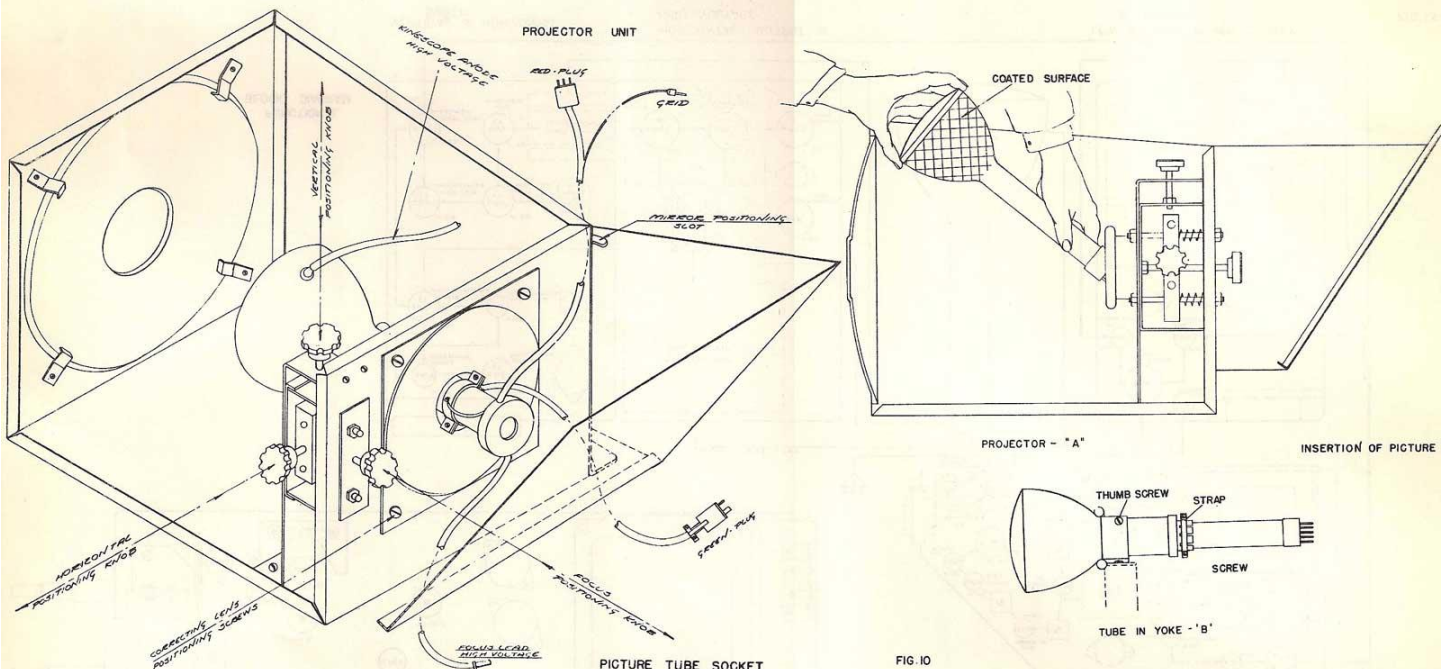

1. INSERT KINESCOPE IN PROJECT AS SHOWN IN "A". HOLDING NEC FACE PLATE, BEING CAREFUL NO HANDLE COATED SURFACE.
2. PLACE TUBE AS FAR INTO YOKE POSSIBLE, BEING SURE NECK OF IS SEATED FLUSH IN YOKE.
3. TIGHTEN NECK STRAP AS SHOWN IN "B".

FIG 1